Fldigi Configuration Check List

Version 2.3 - 01/19/2017 WA2LBE KC2SKG

Check list for fldigi-3.23.17

flarq-4.3.6 (installed along with fldigi)

flmsg-4.0.0

flwrap-1.3.4

flamp-2.2.03

This check list assumes you have successfully installed all the above programs.

All defaults are assumed, only those needed for RACES, have been identified

<u>Fldigi</u>


- Start Fldigi
- Close the Fldigi Configuration Wizard, we will be using the configure menu
 If "Windows Firewall has blocked some features ..." pops up
 Click> Allow access
- Configure > Operator:

Callsign: <your call sign>

Name:<Your first name>, [Optional: First and Last name.] QTH: <City, State-abbreviation>[where you are licensed]

Locator: <Maidenhead Grid Locator>,

Antenna: <very-brief-description-of-most-used-antenna>, e.g., "J-pole"

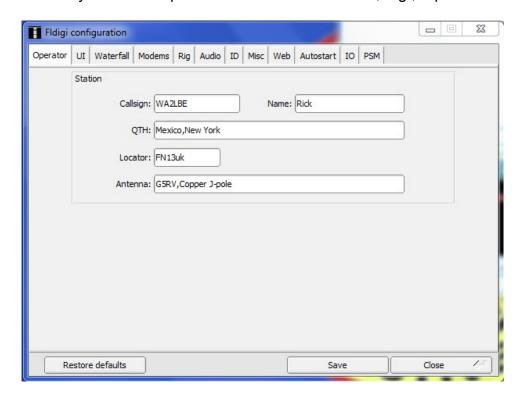

[To be legal the callsign must be changed here each time the radio operator that uses this computer program for radio transmissions, is changed.]

Click Save

- Configure>Misc>CPU: Use default value (unchecked) unless CPU is slow.
- Configure>Misc>NBEMS:

Check (enable): Open message folder.


Uncheck (disable): Open in browser. (optional-depending on user)

With this checked, any received message form will be displayed in the default browser suitable for printing.

Browse using "Locate flmsg" and highlight flmsg.exe application. Click> Open

Locations based on system type: Windows – 64 bit: C:\Program Files (x86) Windows – 32 bit: C:\Program Files


The FLMsg application folder label contains the version number.

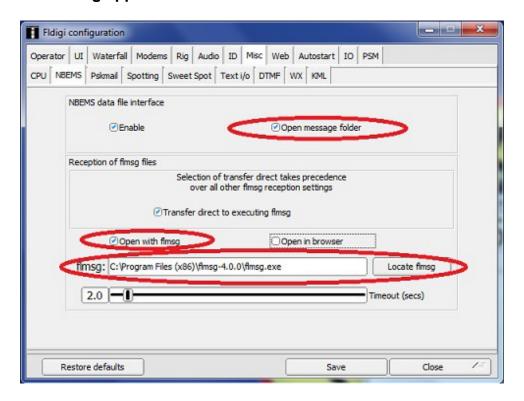

Click Save


Configure>Modems>MT-63

Check (enable): Long receive integration. Uncheck (disable): Allow manual tuning.

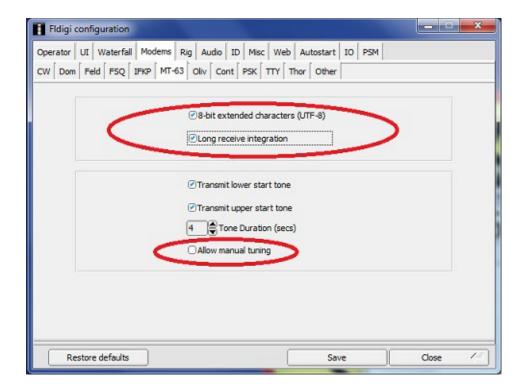


Click Save

- Configure>Autostart>flamp
 Locate flamp.exe file and click Open
 Click>Enable button
- Configure>Autostart>Prog 1
 Locate flmsg.exe file and click Open Click>Enable button
- Configure>Autostart>Prog 2
 Locate flwrap.exe file and click Open Click>Enable button

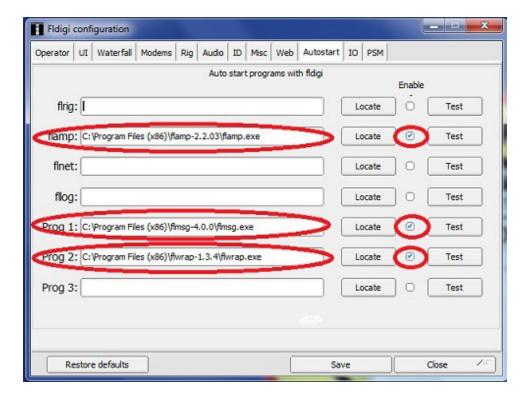

- o Click Save
- Configure>Audio>Devices
 Check (enable): PortAudio

For now, you will using the internal sound card, select the proper audio settings for your computer.

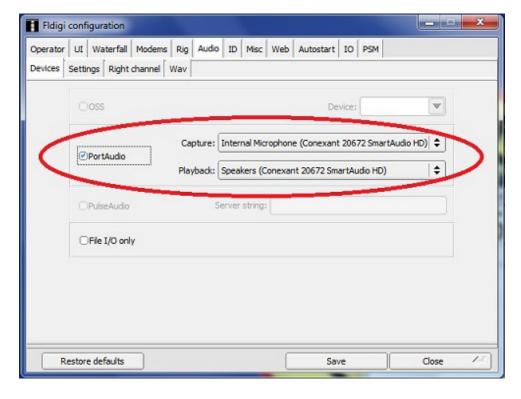


• FINALLY: Click the SAVE button, then the Close button.

Use the main menu selection "View>Rig/Log Controls"

Select: None

Use the main menu selection "Op Mode>MT63>MT63-2000L".

Confirm "MT63-2KL" is indicated in lower left hand block of Fldigi

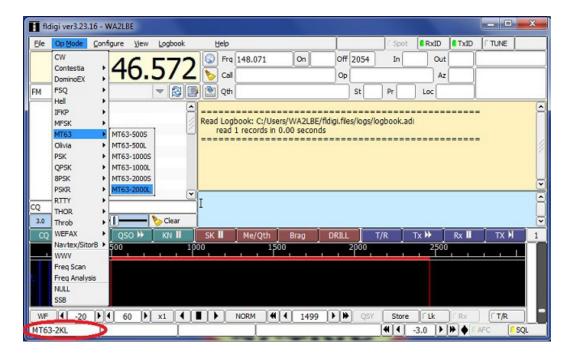

- o Use the main menu selection "Configure>Save Config." Menu selection
- Minimize Fldigi to taskbar

<u>Flmsg</u>

Start Flmsg

Click>Tools>Expert Dialog

On the message window that opens:

Config>Personal data


Call: <your call sign>

Name: <Your first name>, [Optional: First and Last name.]

Addr: <Street address> [Optional]

City/St/Zip: <City, State and ZIP code> [Optional]


Configure>ARQ (Socket in older versions)
 Check (enable):Sync modem to fldigi

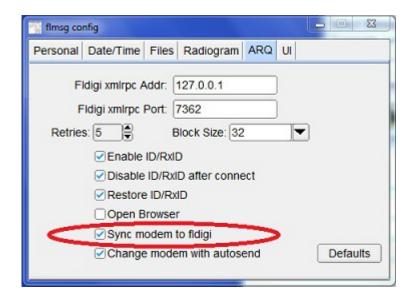

- Config>UI>
 - Check (enable):UserInterface = Expert (This will open message forms on startup)
- Close The Config window, no SAVE required
- Minimize both Flmsg windows to taskbar

Flamp

- Start Flamp
- Click>Configure
- Enter Callsign and location
- Close Flamp window, No SAVE required

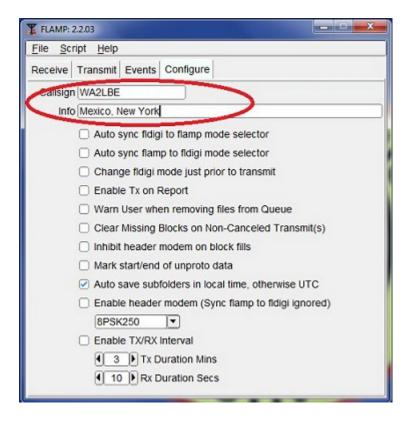


Flwrap

No setup required


Fldigi check-out

- Close all open Fldigi windows
- Restart Fldigi Verify fldigi, flwrap, flamp, and one flmsg form opens.
- Minimize all windows but Fldigi
- Verify that no external sound interface is connected to the computer
- Type "HELLO WORLD" into the lower BLUE Transmit pane Click>TX>I (right most macro)

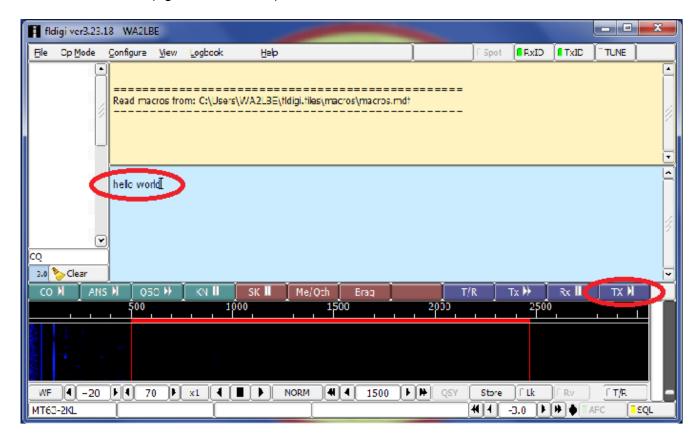

The message will echo into the upper TAN receive pane, in red, the BLUE will erase as it is transmitted.

The transmitted tones will show up in the waterfall, and be heared from the computer's speakers.

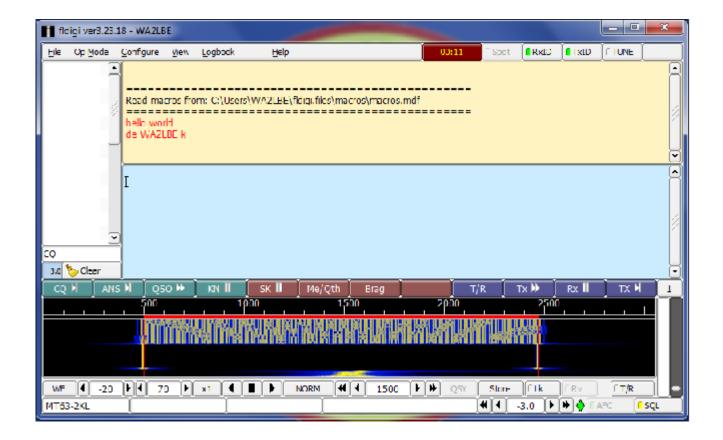

If problems are encountered, re-check configurations and computer sound card settings. To return a menu item back to installation values: click>Restore Defaults (or just "Defaults", on some windows)

<< You will be ready to send and receive with fldigi, once you have installed your sound interface. See you on the air >>

This checklist is for VHF/UHF operation. To avoid overheating your radio, use only enough power as necessary to maintain contact. Digital modes run 80 to 100% duty cycle.